


Single Colour LED Cove Washers Installation Guidelines

Please note that these guidelines are guidelines only and in no way supersede any construction or installation standard. It is strongly recommended that local building and electrical codes be consulted before installation to guarantee compliance.

General Layout

Constant Voltage Power Supply

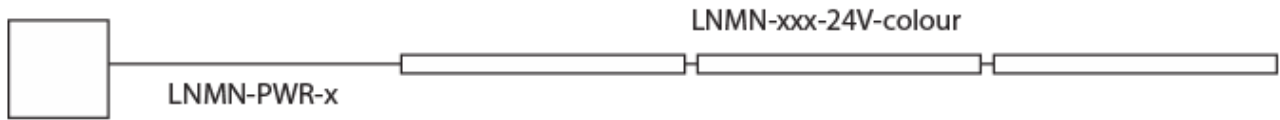

Before you start:

1. Take the power supply, cables and at least one of the tubes out of the boxes; note which cable is the input and which is the output.
2. Verify the voltage of the power supply is the same as the tubes
3. Verify the load does not exceed the power supply

LNMN-300-xx	3.85W
LNMN-600-xx	7.6W
LNMN-1000-xx	11.5W

Mounting and Layout

Tubes can be installed with mounting clips or tie straps. Mounting clips are the preferred method as they allow for air flow. Tubes must not be installed closer than 1 inch apart from each other laterally.

Tubes are to be interconnected with the input and output 2-pin cables and can be extended with the 2-pin cords.

The maximum distance from the Power Supply to the END of the last tube is approximately 150ft. Check the power supply for its IP rating and install appropriately.

Tubes will have a length of LEDs as follows:

LNMN-300-24V	330mm 45 LEDs
LNMN-600-24V	660mm 90 LEDs
LNMN-1000-24V	990mm 135 LEDs

Tubes have a 40° beam pattern and may be installed with gaps between tubes.